

QUIET KIT

Installation
instructions

FOR SHOWER TRAY

MULTI-LANGUAGE



Ready to install soundproofing solution

Kit contents



items	quantity	function
big dampers		reduces vibration and noise from the largest, flattest and most vibration-loaded parts of the object
triangle dampers		removes vibration and noise from corner areas of the object
local dampers		minimizes residual vibration and noise locally in the area requiring treatment
warmer		retains heat, promotes faster heating of the object, and then keeps it warm longer.
memory foam		effectively absorbs noise due to its porous structure. Elastic and soft material, easy to work with
gloves		helps keep your hands safe and clean

IMPORTANT SAFETY INFORMATION



Always wear protective gear when installing



Keep away from open flames, sparks or high heat



Watch for sharp foil & film edges — risk of cuts



Use only as intended



Ventilate after installation (temporary mild odour)



Work with pleasure and without haste

- 1** **PREPARATION**
Put on protective gloves and clean the surface where the material will be installed

**QUIET
KIT**


- 2** **INSTALL DAMPERS**
Big, triangle and local



Fit the big dampers to the underside of the shower tray bottom



Fix the local dampers to the sides of the shower tray, two on each side

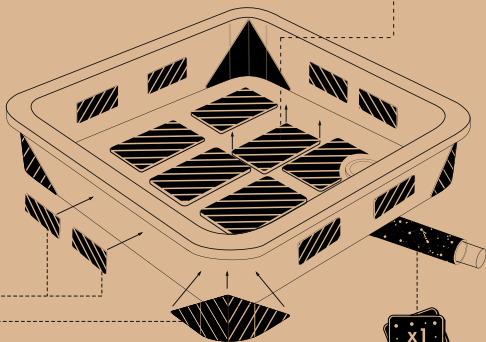

Use the triangle dampers to the corners of the shower tray




- 3** **INSTALL THERMAL RETAINERS**



apply the warmers to the bottom of the shower tray as a second layer, on top of the big dampers


KEEP YOUR FEET WARM

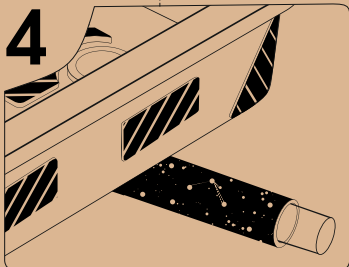

TREAT THE SIPHON WITH ABSORBER
Apply the memory foam material to the siphon



FINAL RESULT

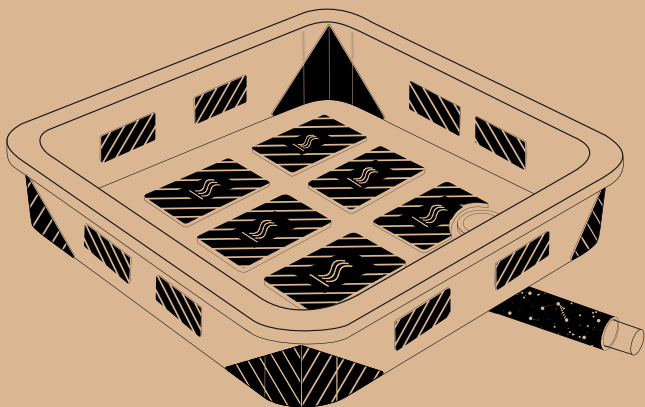

quiet-kits.com

Thank you for choosing



Learn more about us