

QUIET KIT

BATHTUB

Installation manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Item	Quantity	Function
Large dampers		Reduces vibration and noise from the largest, flattest and vibration-prone parts
Triangle dampers		Reduces vibration and noise from corner areas
Warmer		Retains, promotes faster heating and keeps it warm longer
Memory foam		Effectively absorbs noise due to its porous structure
Gloves		Help keep your hands safe and clean

IMPORTANT SAFETY INFORMATION



Always wear protective gloves during installation



Keep away from fire and high heat



Beware of sharp foil & film edges - cutting hazard



Use only as intended



Ventilate room after installation



Exercise caution and work at a comfortable pace

1



PREPARATION


Put on protective gloves and clean the surface where the material will be installed

QUIET
KIT

2

INSTALL DAMPERS

Large and Triangle

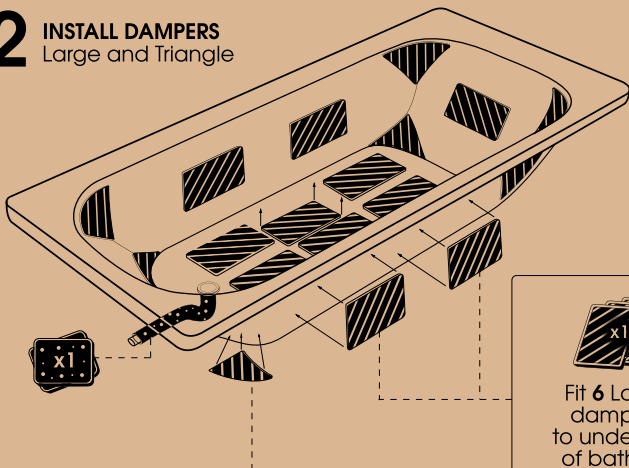

Apply Triangle dampers to corners of bathtub



Fit 6 Large dampers to underside of bathtub bottom and 6 to sides of bathtub

3




INSTALL THERMAL PADS

Apply Warmers to bottom of bathtub as a second layer, on top of the Large dampers

KEEP YOUR FEET WARM



4

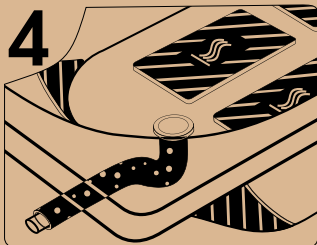

WRAP DRAIN PIPE WITH MEMORY FOAM

Apply the Memory Foam material to drain pipe




REDUCED
BATH NOISE



WARMER
BATH BOTTOM

FINAL RESULT

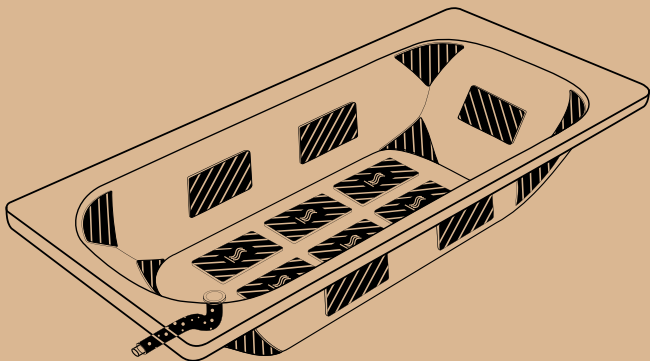

quiet-kits.com

Thank you for choosing



Learn more