

QUIET KIT

BATHTUB

Installation manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Item	Quantity	Function
Large strong dampers	 x12	Reduces vibration and adds rigidity thanks to the metal foil. This shape is used on the largest, flattest and most vibration-prone parts
Triangle strong dampers	 x8	Reduces vibration and improves rigidity at all corners. Stabilises the surface
Heater	 x6	Effectively retains heat and removes residual noise thanks to the red mastic. Keeps and supports heat, promotes faster heating
Wave Memory Foam	 x1	Absorbs noise in its fine cell structure, increased absorption area thanks to the wavy porous design. Thicker material with increased efficiency
Gloves		Help keep your hands safe and clean

IMPORTANT SAFETY INFORMATION



Always wear protective gloves during installation



Keep away from fire and high heat



Beware of sharp foil & film edges - cutting hazard



Use only as intended



Ventilate room after installation



Exercise caution and work at a comfortable pace

1



PREPARATION


Put on protective gloves and clean the surface where the material will be installed

QUIET
KIT

2

INSTALL STRONG DAMPERS

Large and Triangle

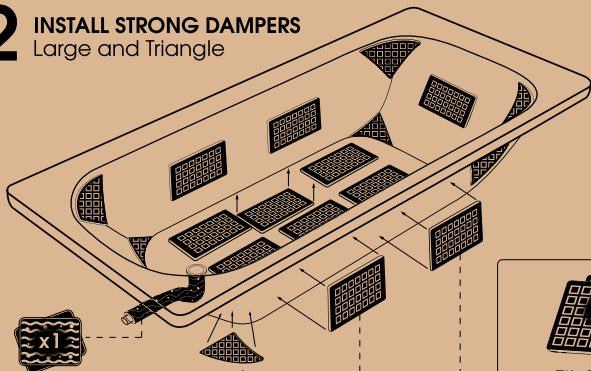

Fit **6** Large strong dampers to underside of bathtub bottom and **6** to sides of bathtub



Apply Strong Triangle dampers to corners of bathtub


3




INSTALL THERMAL PADS

Apply the Heaters to bottom of bathtub as a second layer, on top of the Large dampers

KEEP YOUR FEET WARM

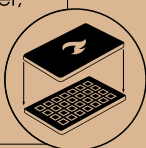

4

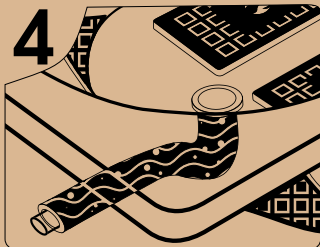

WRAP DRAIN PIPE WITH MEMORY FOAM

Apply the Memory Foam material to drain pipe


FINAL RESULT



SOLID
SILENT TUB



SUPERIOR
HEAT RETENTION

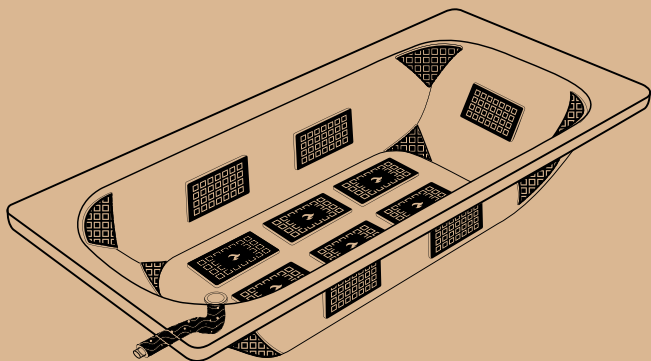

quiet-kits.com

Thank you for choosing



Learn more