

QUIET KIT

KEYBOARD

Installation
manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Memory
Foam

Effectively absorbs noise
due to its porous structure



Gloves

Help keep your hands
safe and clean

IMPORTANT SAFETY INFORMATION



Always wear protective
gloves during installation



Keep away from fire
and high heat



Beware of sharp foil & film
edges - cutting hazard



Use only as intended



Ventilate room after
installation



Exercise caution and work
at a comfortable pace

1 PREPARE THE WORKSPACE AND REMOVE THE SCREWS

Set up a clean, well-lit area on a stable surface.

Disassemble the keyboard by carefully removing all screws

2




GET THE SURFACE READY

Put on protective gloves and clean the surface where the material will be installed

3

INSTALL MEMORY FOAM

Cut Memory Foam pieces to size and install them carefully. Choose the most empty places where the foam can open up and absorb more noise. Do not force it into gaps that are too small — this will prevent proper expansion and complicate the installation

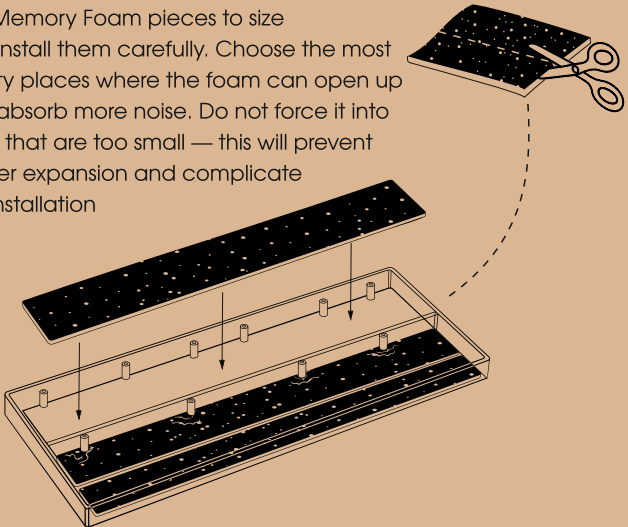

4

REASSEMBLE THE KEYBOARD

Attach the top part of the keyboard and tighten all screws securely. Enjoy the improved effect!


FINAL RESULT



IMPROVES
TYPING SOUND



ABSORBS
RATTLE NOISE

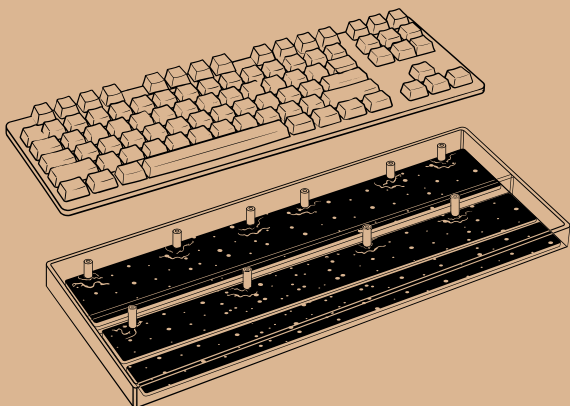

quiet-kits.com

Thank you for choosing



Learn more