

QUIET KIT

SHOWER TRAY

Installation manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Item	Quantity	Function
Large dampers	 x6	Reduces vibration and noise from the largest, flattest and most vibration-prone parts
Triangle dampers	 x4	Removes vibration and noise from corner areas
Local dampers	 x8	Minimizes residual vibration and noise locally
Warmer	 x6	Retains warmth, promotes faster heating, and keeps it warm longer
Memory foam	 x1	Effectively absorbs noise due to its porous structure
Gloves		Help keep your hands safe and clean

IMPORTANT SAFETY INFORMATION



Always wear protective gloves during installation



Keep away from fire and high heat



Beware of sharp foil & film edges - cutting hazard



Use only as intended



Ventilate room after installation



Exercise caution and work at a comfortable pace

1



PREPARATION

Put on protective gloves and clean the surface where the material will be installed

QUIET
KIT

2

INSTALL DAMPERS


Big, Triangle and Local



Fit Large dampers to underside of shower tray bottom



Fit Local dampers to sides of shower tray, two on each side

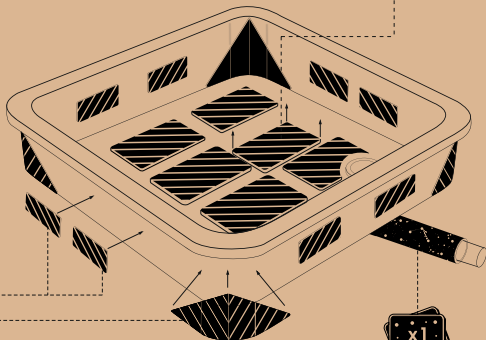

Apply Triangle dampers to corners of shower tray



3




INSTALL THERMAL PADS

Apply the Warmers to bottom of shower tray as a second layer, on top of Large dampers

KEEP YOUR FEET WARM



4

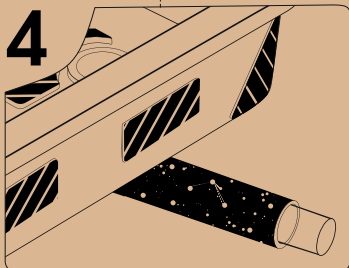

WRAP DRAIN PIPE WITH ABSORBER

Apply Memory Foam to drain pipe


FINAL RESULT



SILENT
NIGHT SHOWERS



FASTER
TRAY HEATING

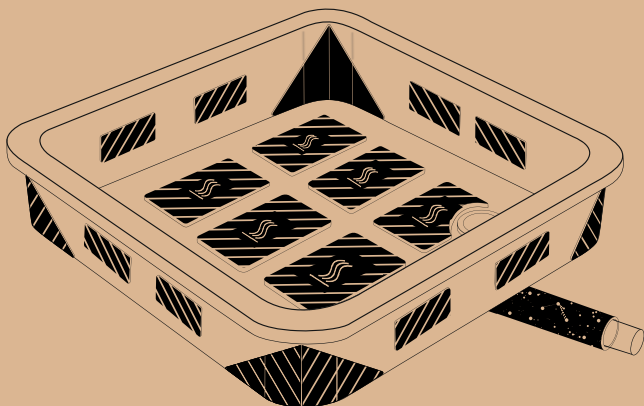

quiet-kits.com

Thank you for choosing



Learn more