

QUIET KIT

SHOWER TRAY

Installation
manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Item	Quantity	Function
Large Strong dampers	 x6	Reduces vibration and adds rigidity thanks to metal foil. This shape is used on the largest, flattest and most vibration-prone parts
Triangle Strong dampers	 x4	Removes vibration and adds framing at all corners. Stabilises the surface.
Local strong dampers	 x8	Minimises residual vibration and noise, makes the surface more durable
Heater	 x6	Effectively retains heat and removes residual noise thanks to red mastic. Retains heat, promotes faster heating
Wave Memory Foam	 x1	Increased absorption area thanks to the wavy porous design, absorbs noise in the fine-cell structure. Thicker material with increased efficiency.
Gloves		Help keep your hands safe and clean.

IMPORTANT SAFETY INFORMATION



Always wear protective gloves during installation



Keep away from fire and high heat



Beware of sharp foil & film edges - cutting hazard



Use only as intended



Ventilate room after installation



Exercise caution and work at a comfortable pace

1



PREPARATION

Put on protective gloves and clean the surface where the material will be installed

QUIET KIT

2

INSTALL STRONG DAMPERS


Large, Triangle and Local



Fit Large strong dampers to underside of shower tray bottom



Fit Local strong dampers to sides of shower tray, two on each side

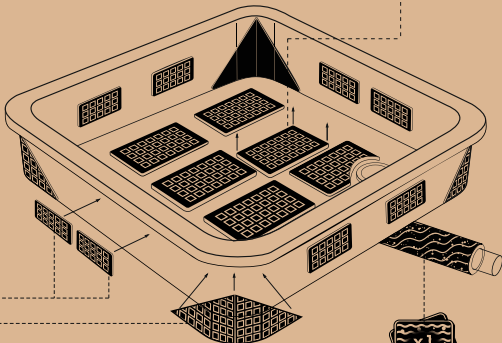

Apply Triangle strong dampers to corners of shower tray




3




INSTALL THERMAL PADS

Apply Heaters to bottom of shower tray as a second layer, on top of Large dampers

KEEP YOUR FEET WARM

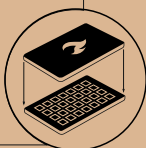

4

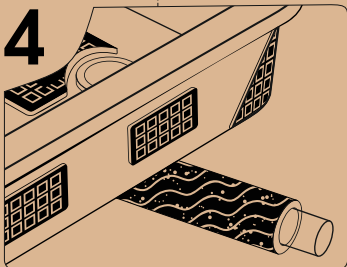

WRAP DRAIN PIPE WITH ABSORBER

Apply Wave Memory Foam to drain pipe


FINAL RESULT



SOLID
QUIET SURFACE



THERMAL
SHIELD UPGRADE

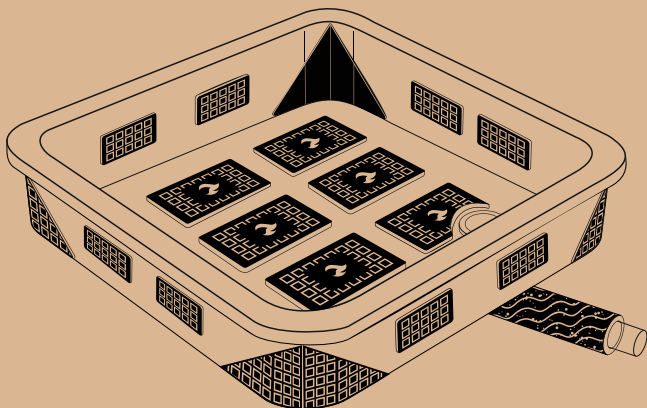

quiet-kits.com

Thank you for choosing



Learn more