

SOIL STACK

Installation
manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Item	Quantity	Function
Strong Triangle dampers	 x14	Placed on main sewage pipe in a staggered (chess) pattern to reduce low-frequency noise from flowing water along the whole surface
Strong Local dampers	 x6	Fixed on short connector pipes between two sections where triangles do not fit and reduce vibration exactly in those spots
Strong Circle dampers	 x2	Used on round end caps and similar fittings to absorb vibrations
Wave Memory foam		Wave Memory Foam is wrapped around pipe joints and the noisiest bends to absorb swirling water noise all around the pipe
Gloves		Help keep your hands safe and clean

IMPORTANT SAFETY INFORMATION



Always wear protective gloves during installation



Keep away from fire and high heat



Beware of sharp foil & film edges - cutting hazard



Use only as intended



Ventilate room after installation



Exercise caution and work at a comfortable pace

1



PREPARATION

Put on protective gloves and clean the surface where the material will be installed



2

INSTALL DAMPERS

Triangle, Local and Circle



Place Strong Triangle dampers on main sewage pipe in a staggered pattern, keeping at least 20 cm between elements vertically



Fix Strong Local dampers on short connector pipes between two sections, centering each piece on the middle





Install Strong Circle dampers on round end caps and similar round fittings

3

WRAP WAVE MEMORY FOAM

tightly around the pipe joints and the noisiest bends, overlapping the ends by a few centimeters.

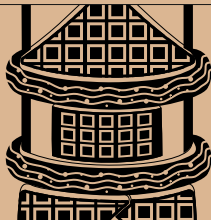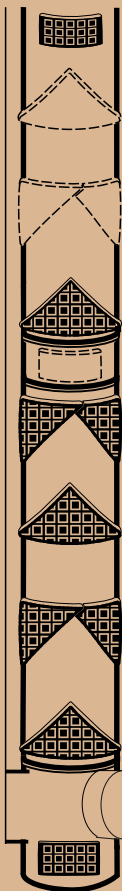


FINAL RESULT



**BLOCK
DRAIN RAMBLE**



**UPGRADE
HOME QUIET**

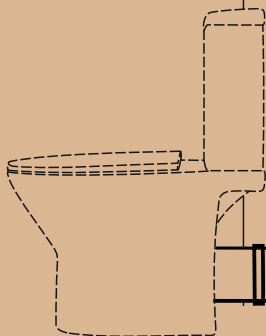

quiet-kits.com

Thank you for choosing



Learn more