

QUIET KIT

WINDOW SILL

Installation manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Item	Quantity	Function
Triangle dampers		Distribute and soften impact from rain and wind along the sill, reducing overall noise
Local dampers		Stabilise critical points of the sill and cut down local rattling where metal tends to buzz or resonate
Anti-Squeak tape		Softens contact between sill and window frame so knocking and squeaking are not passed into the window
Gloves		Help keep your hands safe and clean

ATTENTION!

This kit is designed for 2 windows with a total width of up to 3 meters
The installation layout is shown for an example window 1.5 meters wide

IMPORTANT SAFETY INFORMATION



Always wear protective gloves during installation



Keep away from fire and high heat



Beware of sharp foil & film edges - cutting hazard



Use only as intended



Ventilate room after installation



Exercise caution and work at a comfortable pace

1




PREPARATION

Detach exterior window sill, remove any dirt, and clean the surface thoroughly
Make sure it is completely clean and dry before installation

2


INSTALL THE DAMPERS

Apply dampers on the sill as shown in the layout diagram

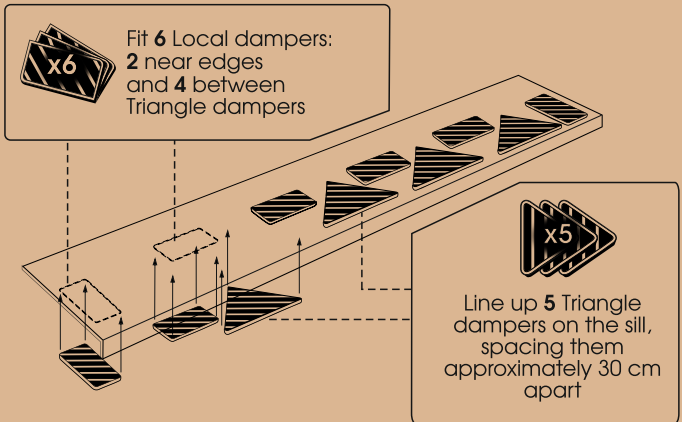

3

APPLY THE ANTI-SQUEAK TAPE

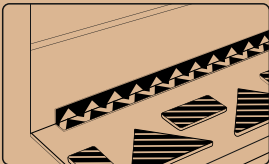

Attach the Anti-Squeak tape along the joint where the window sill meets the window frame to soften contact and reduce noise

4

REFIT THE SILL

Reinstall the window sill in its original position and secure it


FINAL RESULT



REDUCED
RAIN NOISE



LESS
METAL RATTLE

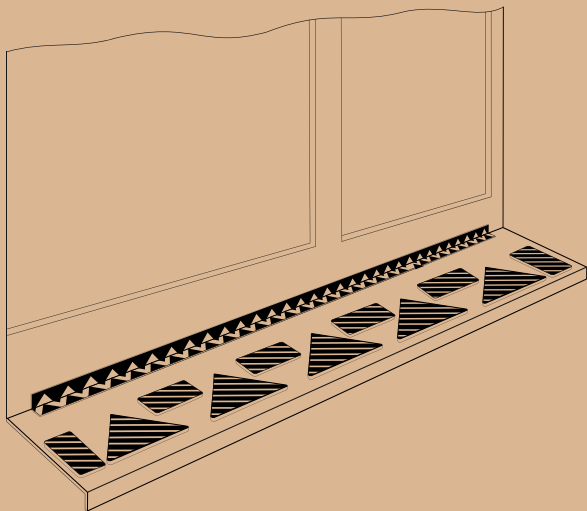

quiet-kits.com

Thank you for choosing



Learn more