

QUIET KIT

WINDOW SILL

Installation manual

OTHER LANGUAGES



Ready-to-install soundproofing solution

Kit contents



Item	Quantity	Function
Strong Triangle dampers	 A black triangle with a white 'x10' in the center, surrounded by a grid pattern.	Reinforce the sill against heavy rain and wind loads, reducing peak impact noise to a minimum.
Strong Local dampers	 A black rectangle with a white 'x12' in the center, surrounded by a grid pattern.	Lock the most stressed sill zones in place suppress deep vibrations and metallic rattle
Buffer Tape	 A black and white wavy line pattern representing a tape.	Creates a continuous soft barrier between sill and frame, blocking structural noise and microvibrations
Gloves	 A black and white illustration of a pair of hands wearing gloves.	Help keep your hands safe and clean

ATTENTION!

This kit is designed for 2 windows with a total width of up to 3 meters
The installation layout is shown for an example window 1.5 meters wide

IMPORTANT SAFETY INFORMATION



Always wear protective gloves during installation



Keep away from fire and high heat



Beware of sharp foil & film edges - cutting hazard



Use only as intended



Ventilate room after installation



Exercise caution and work at a comfortable pace




1 PREPARATION


Detach exterior window sill, remove any dirt, and clean the surface thoroughly
Make sure it is completely clean and dry before installation

2 INSTALL THE STRONG DAMPERS

Apply dampers on the sill as shown in the layout diagram

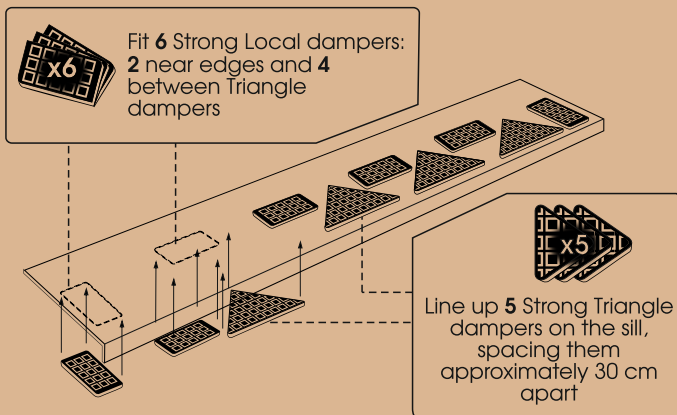

3 APPLY THE BUFFER TAPE

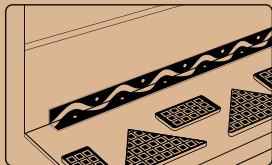

Attach the Buffer Tape along the joint where the window sill meets the window frame to soften contact and reduce noise

4 REFIT THE SILL

Reinstall the window sill in its original position and secure it


FINAL RESULT



SILENT
RAINY NIGHTS



REDUCES
VIBRATION TRANSFER

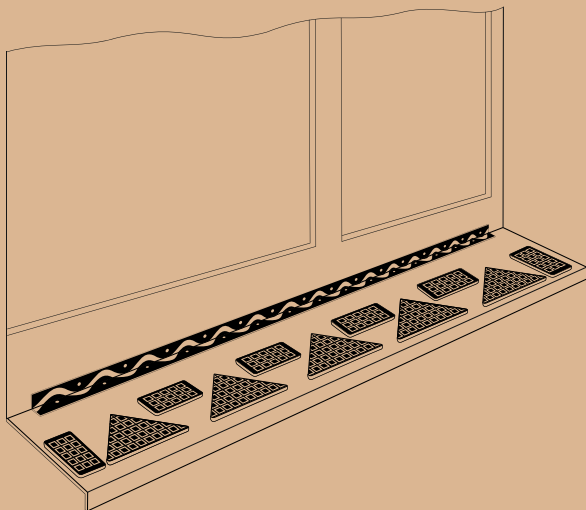

quiet-kits.com

Thank you for choosing



Learn more